


Rotofast™ Cloud Anchors

Rotofast™ Cloud Anchors allow you to suspend our 1.5" and 2" acoustical panels from a ceiling in a cloud formation.

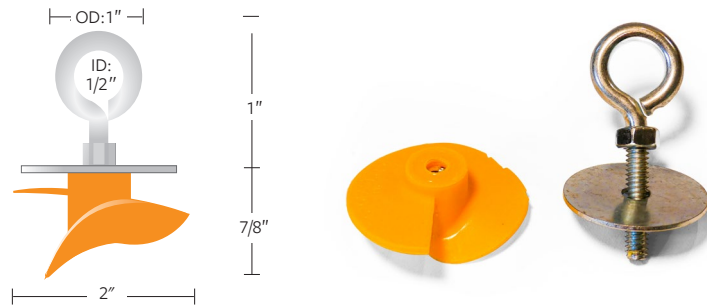


Before you start:

Determine how many Cloud Anchors are required for your panel size(s). (See guide on the right.)

INSTALLATION INSTRUCTIONS:

1. Place panel fabric-side down on a clean surface and mark locations for the anchors on the back. Please make the mark 6 inches in from the panel edge.
2. While pressing down, turn the Cloud Anchor clockwise and screw the anchor into the back of the panel until the washer is flat on the back panel surface. **Important:** Don't go past this point as you could go through the panel face and damage the fabric
3. Repeat process with all anchors. You are now ready to suspend the panels from the ceiling using whatever mechanical fastening the install requires, such as wire, chain, or "S" hooks. (not included)

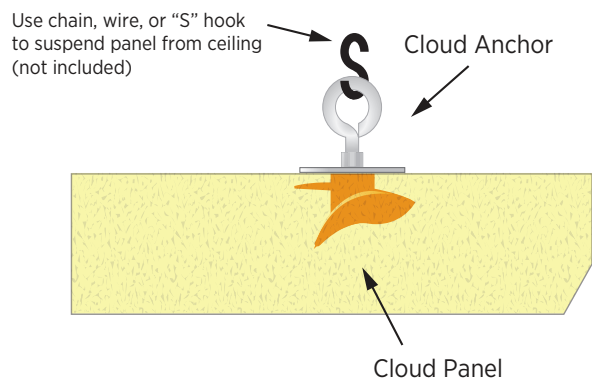


Cloud Anchors required and placement:

Panel Size	Anchors
4' x 4'	4
4' x 8'	6

Cloud Anchors have a 45lb pull-out strength in 6lb/ft³ fiberglass board

4' x 4' panel

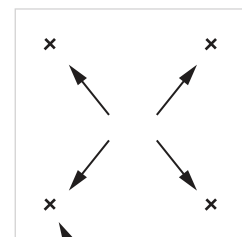

Place
Cloud Anchors
6" from edges

4' x 8' panel

